

## ITEMS REQUIRED



Explorer Outback System




Microphone & Cable



Power Cord

## CONTROL PANELS

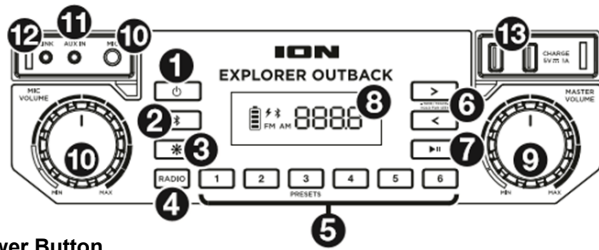


1. **Power Button**
2. **Bluetooth Button** – Tap button to disconnect a paired Bluetooth device. Press and hold button to disable (or enable) the voice prompts.
3. **Light Mode Button**
4. **Radio Selector**
5. **AM/FM Presets**
6. **Tune/Track Button**
7. **Play/Pause**
8. **Display**

<b>Charging Indicator</b>	When fully charged, all battery segments will lit without blinking.
<b>Lighting Bolt Icon</b>	Illuminates when power cable is connected to wall power.
<b>Bluetooth Icon</b>	Icon will be lit solid when paired with a device.
<b>Power Indicator</b>	Indicator will be lit when unit is on.

9. **Master Volume Control**
10. **Microphone Input with Volume Control (1/4")**
11. **Auxiliary Input (1/8"/3.5mm)**
12. **Speaker Link** – Connect two or more Explorer Outbacks together using a 1/8" (3.5mm) aux cable.
13. **USB Charging Ports**
14. **Power Cable Input (on the Back Panel)**

## CONNECT MICROPHONE & POWER

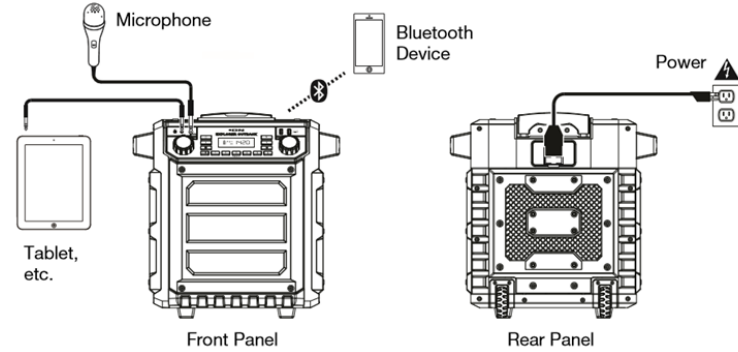

## HOW TO PAIR TO BLUETOOTH

1. Turn on your Bluetooth Device.
2. Power on Explorer Outback.
3. Hit the disconnect button on the block rocker to ensure that no other devices are paired to the unit already.
4. Navigate to your Bluetooth device's setup screen, find "Explorer Outback" and connect. Note: If Bluetooth device prompts a pairing code, enter 0000.
5. To disconnect Bluetooth, hit the disconnect button.

## TROUBLESHOOTING

PROBLEM	QUICK FIX
<i>A high-pitched whistling noise is made when using microphone</i>	Try pointing the microphone away from the speaker. This is feedback.
<i>Too much bass</i>	Adjust the tone or EQ control on your sound source to lower bass level.
<i>Sound is distorted</i>	Try lowering volume control of the sound source, musical instrument or microphone. Adjust Master Volume knob on Explorer outback.
<i>Cannot play music from a flash drive</i>	USB port is only for charging USB devices.