

ITEMS REQUIRED



FIRE PIT



PROPANE TANK




IGNITOR

HOW TO IGNITE FIRE PIT



1

Ensure that unit valve dial is in the “OFF” position by pushing and turning clockwise until the dial stops.

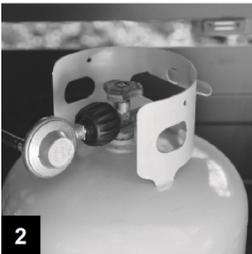

2

Securely attach regulator (large end of hose) to your propane cylinder.

Extend hose to full length and ensure that the propane tank is as far as safely possible from the Firebowl.



3

Slowly turn cylinder to the open position.

Using an igniter, lighter or match, ignite and hold flame slight above the burner, then open the valve on the appliance slowly by turning (counter-clockwise) until the unit ignites.

PROPANE USE & SAFETY

CONNECTING TANK

- Remove the main tank’s valve plug. Thread the POL connector snugly into the main tank by turning the tank valve counter-clockwise.
- Always position the propane tank so that the connecting hose is not bent.

GENERAL USE & DISCONNECTING

- Use soapy water to test all fittings and connections for leaks before operating the appliance.
- NEVER use propane tanks indoors.
- Propane tanks are designed to be used with the valve completely open. Never leave the valve partially open or closed.
- When not in use, turn off all temperature controls and completely close the main valve on the propane tank.

STORAGE & TRANSPORTING

- All propane tanks must be secured in an upright position.
- To prevent the propane tank from being overturned, place in a box or crate.
- Never store propane tanks in a building or a hot vehicle. Heat may cause the relief valve to discharge propane and create a dangerous situation.

DANGER

- If you SMELL GAS, Shut off gas to the appliance & extinguish any open flame.
- If odour continues, keep away from the appliance and immediately call your gas supplier or fire department.

TROUBLESHOOTING

PROBLEM	QUICK FIX
<i>Not heating or low temperature</i>	<ul style="list-style-type: none"> • Check to make sure propane tank is full. • Ensure that the propane tank is properly attached to the hose. • Turn burner knob to OPEN and wait for a few seconds. If it will not ignite instantly repeat a few times.