



## CONTROL PANEL

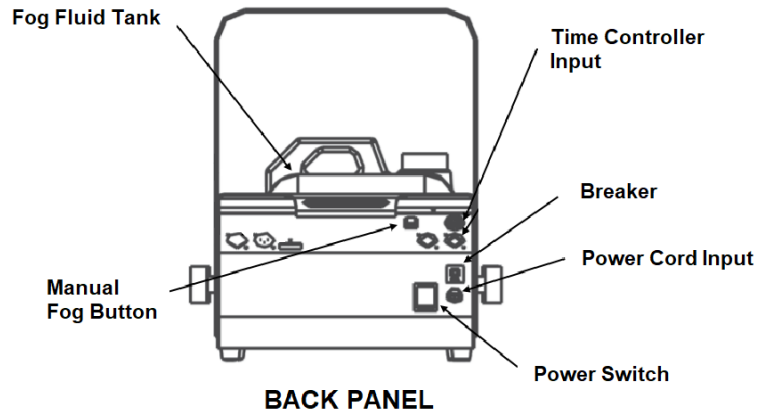

## TIME CONTROLLER

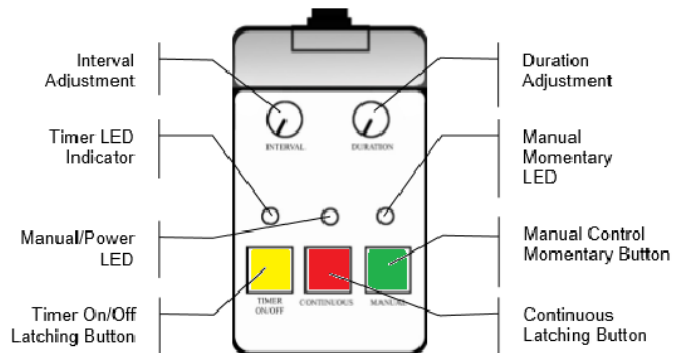

## SAFETY

- Please ensure you are connected to the appropriate voltage.
- Do not expose machine to excess moisture. Operate in temperatures less 40 degrees Celsius.
- Ensure that no flammable materials are close to the product while operating.
- Machine must be used in a location with adequate ventilation, at least 20 inches (50 cm) from adjacent surfaces.
- Do not connect machine to a dimmer package.

## SET UP OF FOG MACHINE

1. Plug in Time Controller into fog machine.
2. Plug unit into appropriate power source. Turn Power Switch ON.
3. Fluid tank will glow red as it heats up. When it glows blue, it is ready.
4. Press the yellow TIMER button on the controller. The yellow LED indicator will light up. The TIMER button will remain on until it is pressed again.
5. Set the INTERVAL and DURATION knobs to desired position:
  - INTERVAL sets amount of time in between bursts of fog.
  - DURATION sets length of time machine runs during the burst.
5. Press red CONTINUOUS button. Machine will release fog until red button is pressed again. Red LED light will light up during continuous operation.
6. For manual bursts of fog, press green MANUAL button.
7. When usage of machine is complete, turn power switch OFF. Disconnect Time Controller and power cord.

## TROUBLESHOOTING

PROBLEM	QUICK FIX
<i>No output or short output (red flashing indicator)</i>	<ul style="list-style-type: none"> <li>• There may be an air bubble in the fluid line.</li> <li>• Turn machine 45 degrees to flatten out bubble and allow for proper flow.</li> <li>• Turn off machine for 5 seconds, and turn machine back on. Repeat as necessary.</li> </ul>
<i>Machine does not power up</i>	<ul style="list-style-type: none"> <li>• Check power cord.</li> <li>• Ensure appropriate voltage to machine is given.</li> <li>• Ensure power outlet is working.</li> </ul>
<i>LED flashing</i>	<ul style="list-style-type: none"> <li>• Refill machine with appropriate fluid.</li> </ul>