


## CONTROL FUNCTIONS

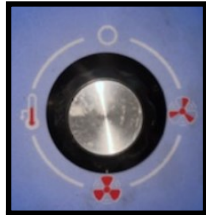

FAN CONTROL



TEMPERATURE



TIMER (MIN)



POWER

## HOW TO OPERATE

1. Move oven to its final location. Ensure there is a minimum 3 inches clearance from each side of the oven for proper air flow.
2. Connect the gas supply (eg. propane tank) to the oven.
3. Plug in the electrical cord to a grounded outlet.
4. Turn power ON. Set temperature on oven by turning dial to desired temperature.
5. Turn Timer dial to set cooking time.
6. Once usage of oven is complete, turn dials to zero. Turn OFF power and cool down unit. Unplug from outlet and disconnect from propane tank.

## TROUBLESHOOTING

PROBLEM	QUICK FIX
<i>No heat</i>	<ul style="list-style-type: none"> <li>• Ensure that the unit is plugged in and the power switch is in the ON position.</li> <li>• Gas valve to oven may be in the closed position. Open gas valve. Ensure that there is proper gas connection.</li> <li>• Ensure that the door is closed.</li> </ul>
<i>Fan does not work</i>	<ul style="list-style-type: none"> <li>• Check electrical supply.</li> <li>• Ensure that the door is closed.</li> </ul>

## ELECTRICAL REQUIREMENTS



### **⚠ DANGER**

- Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death.
- Keep cord and plug off the ground and away from moisture. Do not use extension cord.
- Always unplug the equipment before cleaning or servicing.
- Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.

## PROPANE USE & SAFETY

### CONNECTING TANK

- Remove the main tank's valve plug. Thread the POL connector snugly into the main tank by turning the tank valve counter-clockwise.
- Always position the propane tank so that the connecting hose is not bent.

### GENERAL USE & DISCONNECTING

- Use soapy water to test all fittings and connections for leaks before operating the appliance.
- NEVER use propane tanks indoors.
- Propane tanks are designed to be used with the valve completely open. Never leave the valve partially open or closed.
- When not in use, turn off all temperature controls. Completely close the main valve on tank.

### STORAGE & TRANSPORTING

- All propane tanks must be secured in an upright position.
- To prevent the propane tank from being overturned, place in a box or crate.
- Never store propane tanks in a building or a hot vehicle. Heat may cause the relief valve to discharge propane and create a dangerous situation.

## BEFORE RETURNING

- A \$67.50 cleaning charge will apply to each convection oven if units are not returned in the same condition they were received.
- To avoid cleaning charges, remove food residue. Wipe down all interior and exterior surface areas clean.