


SPECIAL Event RENTALS

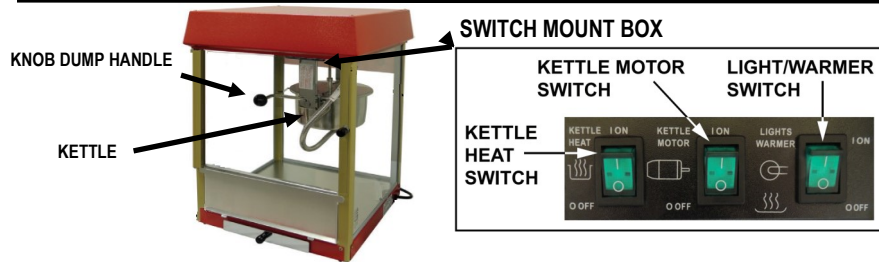

WARNING

- To avoid burns, do not touch the kettle or any heated surface.
- Do not place or leave objects in contact with heated surfaces.

CAUTION

- Do not allow the general public to handle machine when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment.
- This machine is not to be operated by anyone under the age of 18.

- Turn the kettle heat switch, kettle motor and light/warmer switch ON.
- Empty contents of "All In One Popcorn" into the kettle and close the lid.
- Once the popcorn has stopped popping (no more than 5 min)** rotate the knob dump handle to empty the kettle. Return the kettle back to the upright position.
- Repeat this cycle for each additional batch of popcorn.
- Turn off the kettle heat switch after the final batch to eliminate smoke and odor.
- Turn kettle motor and light/warmer switches OFF. Ensure all switches are OFF when there is no popcorn in the kettle
- After letting the kettle cool, wipe the exterior to prevent the remaining oil from burning
- When not popping keep the glass doors CLOSED and the drop panel OPEN .
- Clear intake and exhaust holes (top of the machine) from any obstruction.

TROUBLESHOOTING

WATCH TUTORIAL
(Scan or Click!)



PROBLEM	QUICK FIX
<i>Kettle Does Not Heat</i>	<ul style="list-style-type: none"> Make sure kettle lead-in cord is plugged in and twisted to lock into the kettle receptacle.
Long Popping Cycles	<ul style="list-style-type: none"> Low voltage. Ensure unit is plug into appropriate source. Ensure that unit is connect directly into outlet source (no extension cord).

SPECIAL Event RENTALS

ELECTRICAL REQUIREMENTS



DANGER

- Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death.
- Do not immerse any part of this equipment in water.
- Do not use excessive water when cleaning.
- Keep cord and plug off the ground and away from moisture.
- Do not use an extension cord.
- Always unplug the equipment before cleaning or servicing.
- Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.

HOW TO PREPARE POPCORN

	4oz Kettle	4 to 5 Theatre Bags / package
	6oz Kettle	4 to 5 Theatre Bags / Package 200 to 250 Bags / Case
Each Theatre Bag 4 Cups of Popcorn	8oz Kettle	6 to 7 Theatre Bags / Package 150 to 180 Bags / Case

BEFORE RETURNING

- A \$47.50 cleaning charge will apply to each steam table if units are not returned in the same condition they were received.
- To avoid cleaning charges, allow the kettle to cool for at least 1hour before attempting to clean. Unplug Kettle and remove it from the machine. With a cloth, wipe out the inside of the kettle ,kettle lid, crossbar, outside, and underneath of the kettle.
- Do not place the kettle in water. This will cause damage to electrical components and result in replacement charges.