


## ITEMS REQUIRED

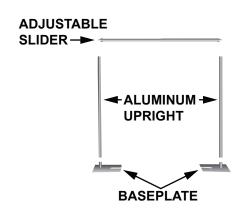



WE RECOMMEND USING 3
PANELS OF FABRIC FOR EVERY
8 -10 FEET OF BACKDROP.

## **HOW TO INSTALL PIPE & DRAPE**

- Set adjustable slider to the desired length and lock into place. Lay the adjustable slider on the ground. NOTICE: Sliders will adjust between 6' - 10', 4' - 7' and 8' - 14' based on the size booked.
- 2. Place baseplates down on each side of the adjustable sliders and insert the aluminum uprights.
- 3. Slide the fabric panels onto the adjustable slider working your way from largest to smallest end.
- 4. Click the adjustable slider into the aluminum upright. If the upright is too high to reach, take the aluminum upright off the baseplate, hold it at a 90° angle, click in the adjustable slider and replace back on the baseplate.
- 5. Adjust drape over all visible posts.

